




////////////////////////////////////

# REMOTE RESERVOIR FRONT SHOCK BRACKETS

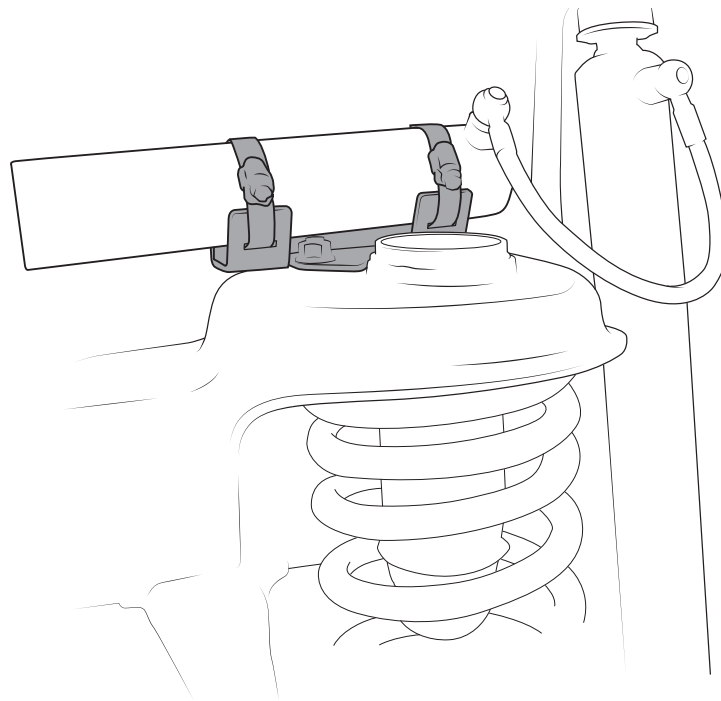

AEV30215AB  
*Last Updated: 11/19/13*

INSTALLATION GUIDE



## PLEASE READ BEFORE YOU START

TO GUARANTEE A QUALITY INSTALLATION, WE RECOMMEND READING THESE INSTRUCTIONS THOROUGHLY BEFORE BEGINNING ANY WORK. THESE INSTRUCTIONS ASSUME A CERTAIN AMOUNT OF MECHANICAL ABILITY AND ARE NOT WRITTEN NOR INTENDED FOR SOMEONE NOT FAMILIAR WITH AUTO REPAIR.

INCLUDED PARTS	QTY	REQUIRED TOOLS
Bracket	2	Basic hand tools
Hose Clamps	4	
3/8" -16 flat head socket cap screw	2	
3/8" -16 flange nut	2	

## INSTALLATION

1. Attach brackets to front spring mounts as shown using supplied hardware. You will have to pull the inner fender up and out of the way.
2. Place remote reservoirs in brackets. Use supplied hose clamps to secure reservoirs to brackets. **CLAMP ROTATION IS CRITICAL**, pay attention to prevent contact with washer bottle.

