


INSTALLATION NOTE:

If you purchased the AEV Cargo Liner and you have a Subwoofer in your vehcile, you will need to trim the right-rear corner of the Liner as shown, removing the highlighted portion.

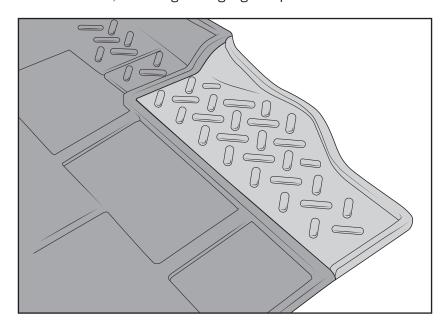

You may also want to trim out the two small circles at the front end of the Cargo Liner to retain access to the tie down points in the floor of the Jeep.

