



# FRONT SKID PLATE 2010-2013 RAM 2500/3500 FOR AEV PREMIUM FRONT BUMPER

## PLEASE READ BEFORE YOU START


TO GUARANTEE A QUALITY INSTALLATION, WE RECOMMEND READING THESE INSTRUCTIONS THOROUGHLY BEFORE BEGINNING ANY WORK. THESE INSTRUCTIONS ASSUME A CERTAIN AMOUNT OF MECHANICAL ABILITY AND ARE NOT WRITTEN NOR INTENDED FOR SOMEONE NOT FAMILIAR WITH AUTO REPAIR.

INCLUDED PARTS	QTY	REQUIRED TOOLS
Front Skid Plate	1	Common Hand Tools
Zip Tie	1	
Seal	1	



Once you have installed your AEV Premium Front Bumper you can attach the Front Skid Plate using existing hardware.

1. Install the adhesive seal to the inside of the Skid Plate as shown.

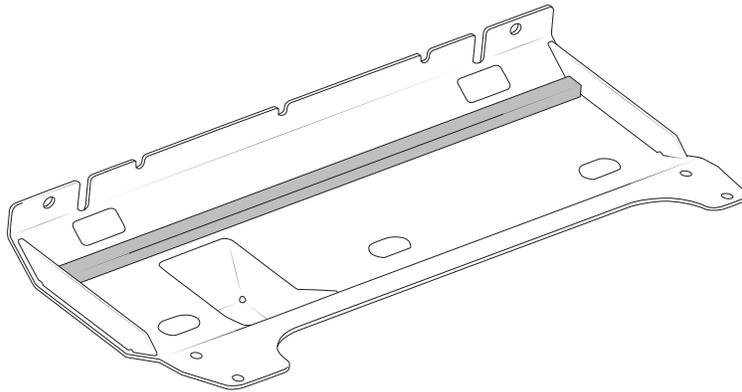

2. Remove the four (4) bolts attaching the sway bar to the frame, and the two (2) lower bolts in the Front Bumper center section.
3. Slide the Front Skid Plate into position and secure with the same hardware removed in the previous step. Torque as shown.
4. Use the provided zip tie to secure the power steering hoses away from the edge of the Skid Plate.

