



PROCAL KIT

FOR 2018+ RAM TRUCK


PLEASE READ BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

INCLUDED PARTS	QTY	REQUIRED TOOLS
AEV Programming Harness	1	Small Screwdriver or Dental Pick
AEV Programming Adapter	1	




1. Install AEV Programming Harness into the OBDII connector.
 - a. Pinch to release the tabs holding the OBDII connector in place.

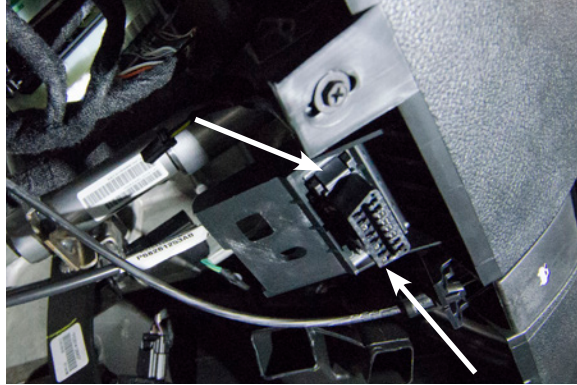


- b. Remove the gray connector locks by pushing the tabs out as shown.



- c. Install the 2 terminals of the harness into the OBDII connector according to labels in cavities 1 and 9.
NOTE: although small, the cavities are labeled on the front of the connector.

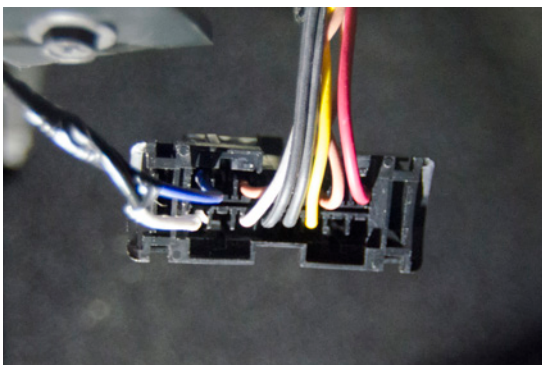

Wire Insertion Side:


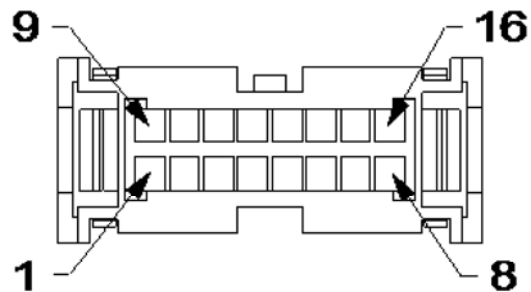


Back side of Connector

- d. Reinstall the OBDII connector locks.
 - e. Attach the OBDII connector back in the factory location.



2. Locate the green Star connector under the left side of the dash.

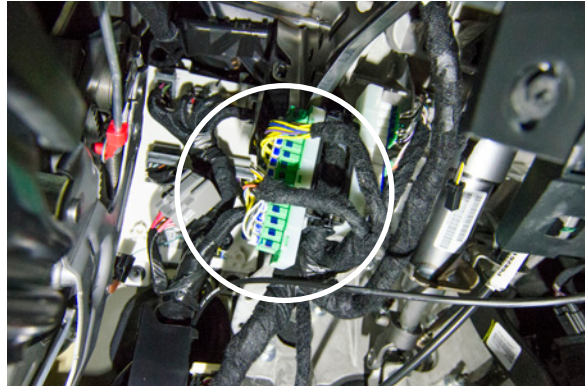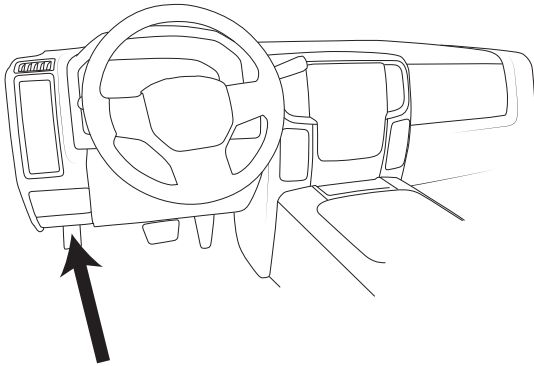

3. Install the AEV Programming Harness into any open slot in the green Star connector.



4. Attach the provided adapter harness to the OBDII connector.



5. Follow instructions for ProCal. ProCal model must be 30406020BG level or later.