



**AUXILIARY LIGHT
BRACKETS**
FOR BISON REAR BUMPER

AEV38060001AA

Last Updated: 03/21/19

INSTALLATION GUIDE



PLEASE READ BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

INCLUDED PARTS	QTY	REQUIRED TOOLS
Aux Light Bracket RH	1	Common Hand Tools
Aux Light Bracket LH	1	
Hardware Pack	1	

THIS BRACKET IS DESIGNED FOR USE WITH THE FOLLOWING LIGHTS:

Baja Design SKU 550006

Rigid Dually 20211 SKU: 20121EM

Vision X Item XIL-OP110 SKU: 9123882



1. Remove and SAVE M10 Torx bolts at the bottom of the bumper (fig. 1).

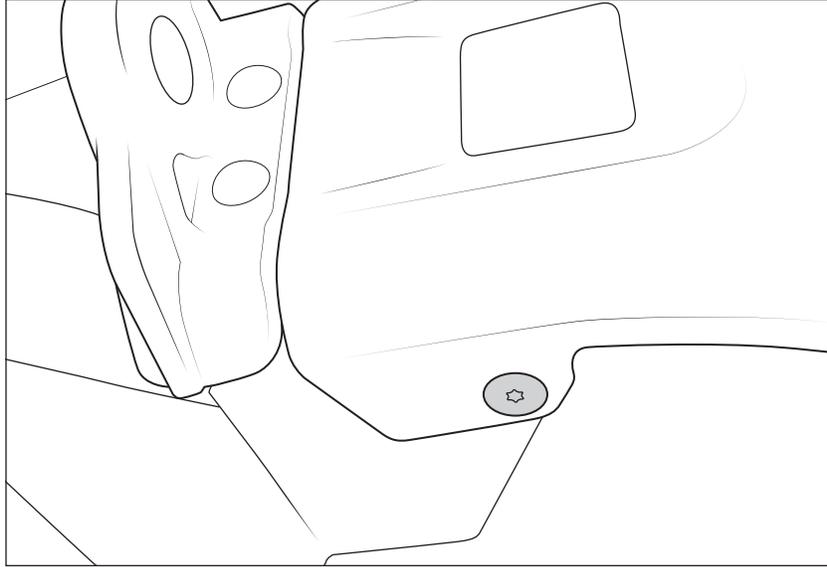


Figure 1

2. Remove the U-nuts on the backside of the bumper. Pry up center of U-nut to release clip (fig. 2).

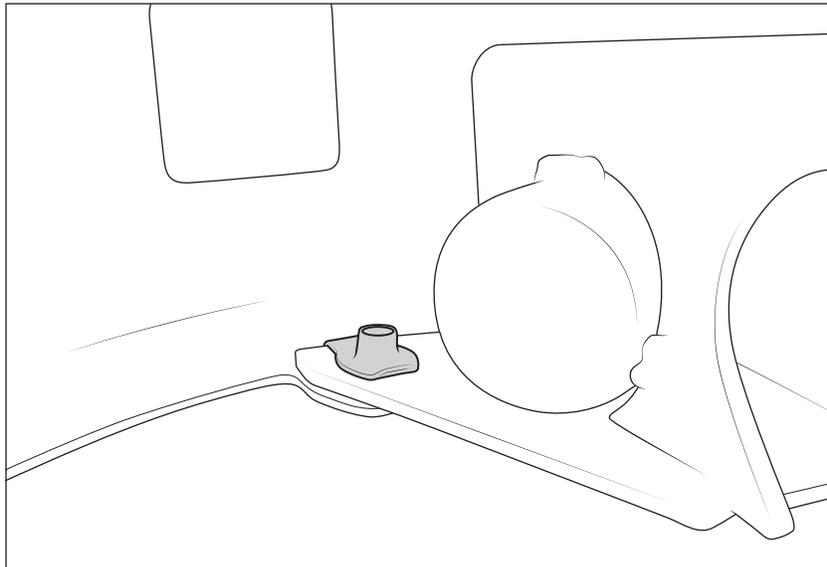


Figure 2



3. Install lights onto the AEV Brackets using the hardware provided with the lights (fig. 3).

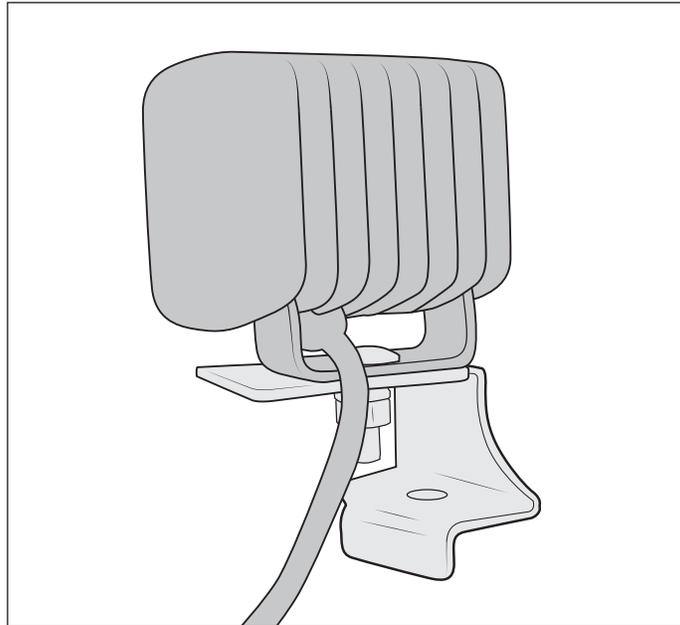


Figure 3

4. Hold lights into position and reinstall the M10 torx bolts removed in step 1. Secure using the provided M10 nut (fig. 4).

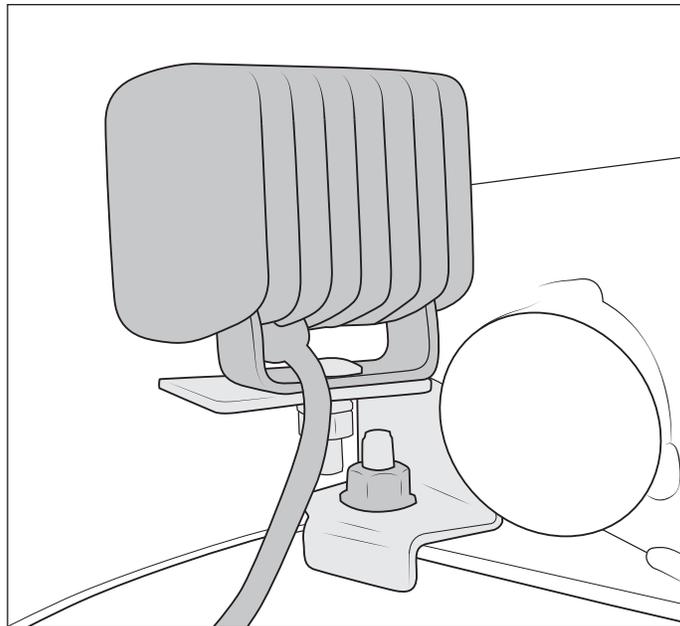


Figure 4