





ZR2 Bedside Template_RH

0 1/2" 1"

ABNF1002AB

1" Square for Scale

Last Updated: 03/14/19

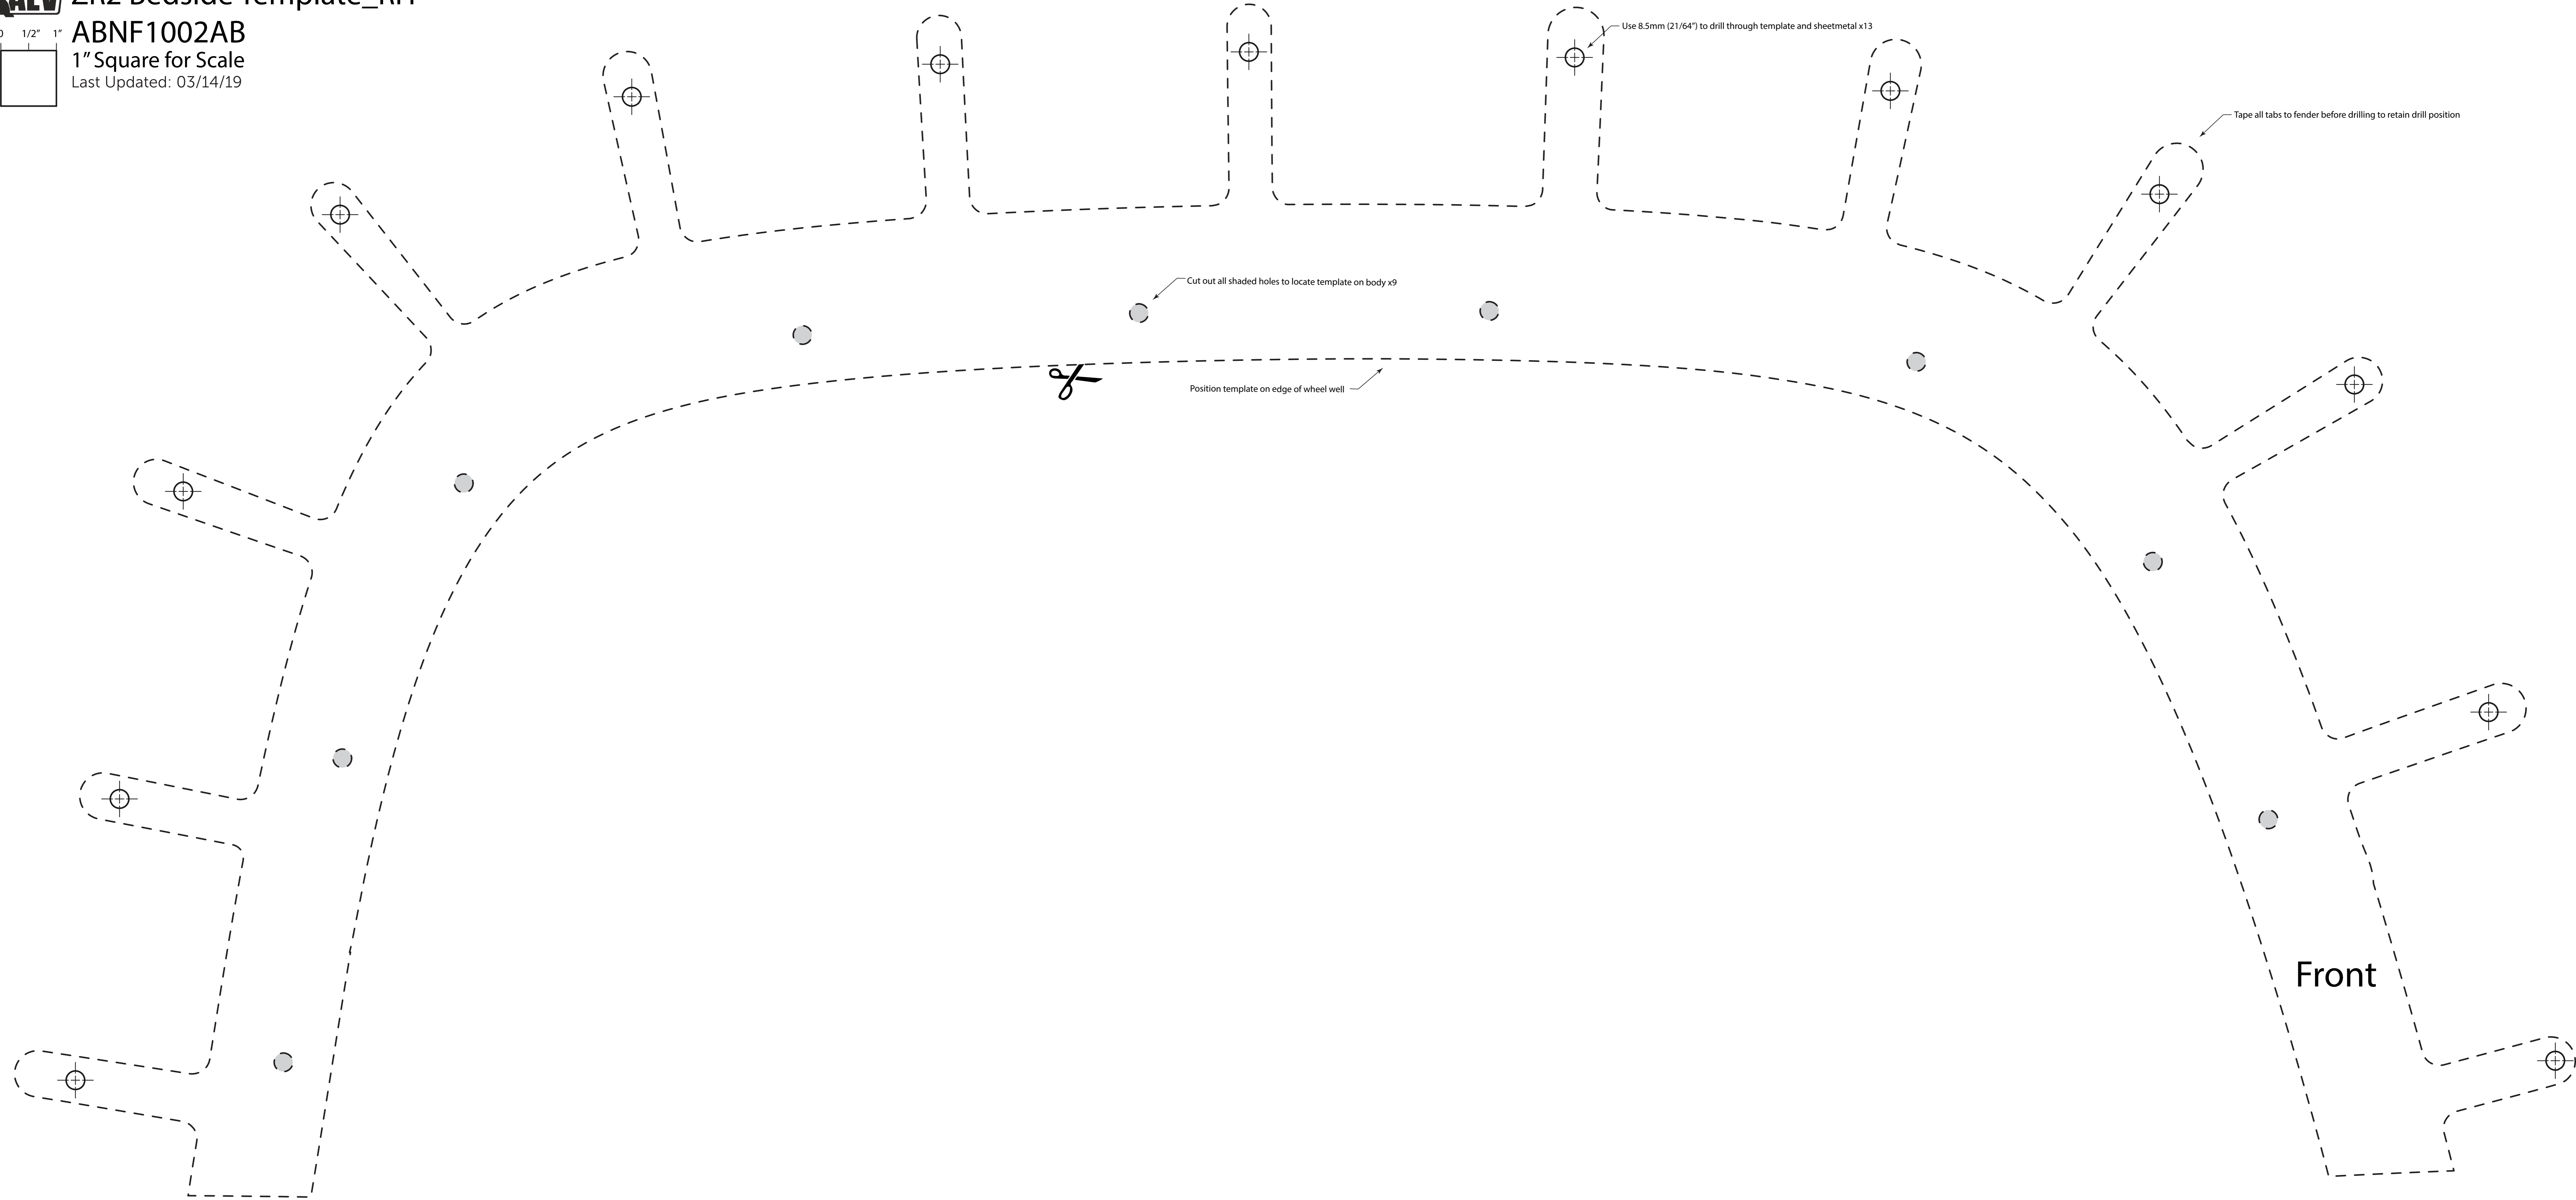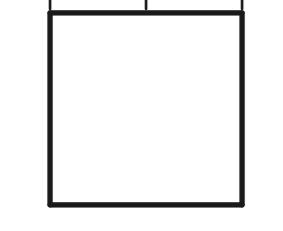

Use 8.5mm (21/64") to drill through template and sheetmetal x13

Tape all tabs to fender before drilling to retain drill position

Cut out all shaded holes to locate template on body x9

Position template on edge of wheel well

Front