




ZR2 Short Bedside Template_LH

0 1/2" 1"

ABNF1003AB

1" Square for Scale

Last Updated: 03/14/19

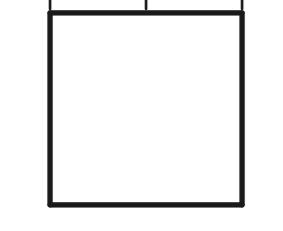

Tape all tabs to fender before drilling to retain drill position

Use 8.5mm (21/64") to drill through template and sheetmetal x12

Cut out all shaded holes to locate template on body x9

Position template on edge of wheel well

Front

