



# BISON FENDER FLARES

FOR CHEVY COLORADO

INSTALLATION GUIDE

AEV30333AA

Last Updated: 06/20/19



## PLEASE READ BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

INCLUDED PARTS	QTY	REQUIRED TOOLS
Front Fender Flares	2	Common Hand Tools
Rear Fender Flares	2	



## I. REMOVE ZR2 FLARES

1. Front Flares
  - A. Remove the M4 torx bolts from inside lower wheel wells, and Push Pins from underside of flares (fig. 1).
  - B. Gently pull flare from vehicle to release all the service clips.
2. Rear Flares
  - A. Remove M4 torx bolts from inside lower wheel wells, M4 torx bolt from underneath front side of flare, and Push Pin from underneath rear side (fig. 2).
  - B. Gently pull flare from vehicle to release all the service clips.

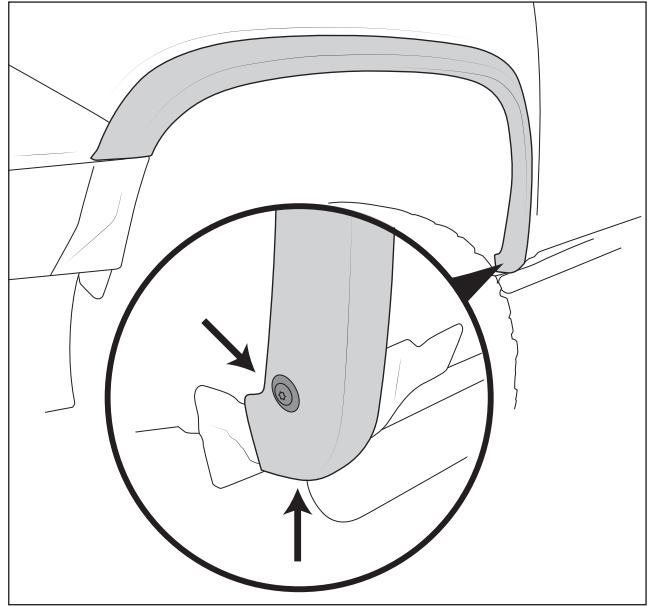


Figure 1

## II. PREPARE VEHICLE

1. Cut out Drilling Templates, and align on vehicle securing with painter's tape. Drill holes for 2nd set of attachment points on all 4 fenders (fig. 3)
2. Deburr and prep all holes with rust prevention.

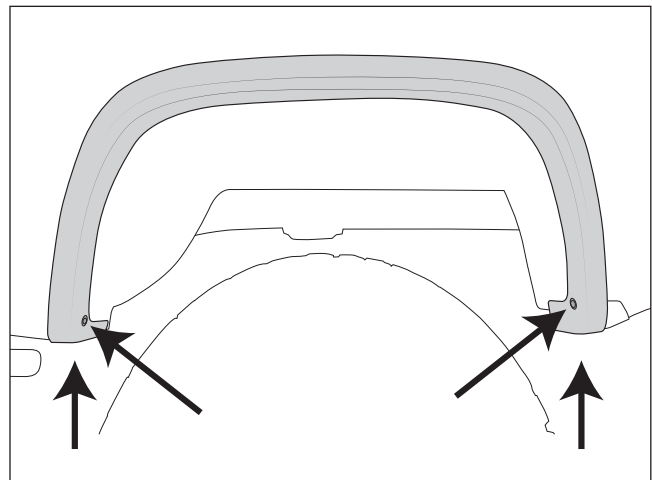


Figure 2


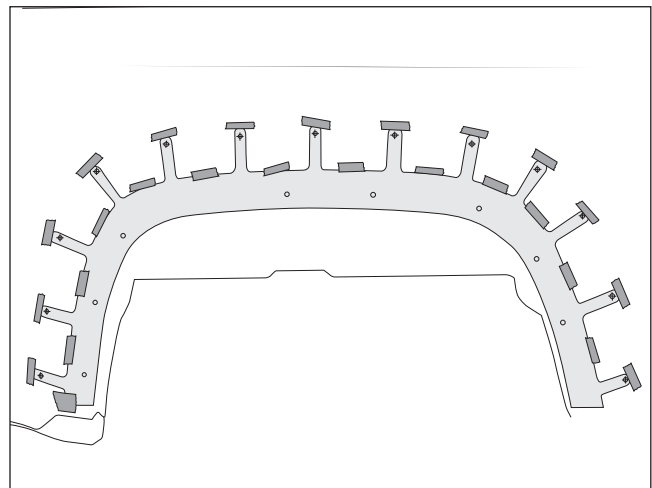


Figure 3

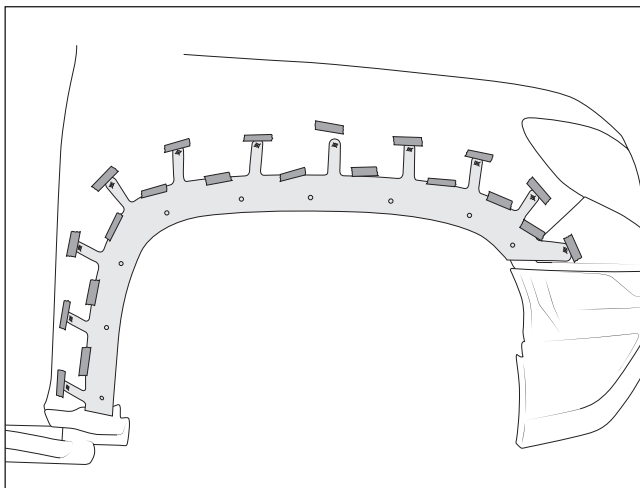

### III. INSTALL BISON FENDER FLARES

1. Working from front to back push flares onto vehicle.
2. Ensure all clips “snap” into fenders.
3. Reinstall M4 torx bolts removed in Section I.
4. Install supplied push clips at bottom of flares (fig. 4).

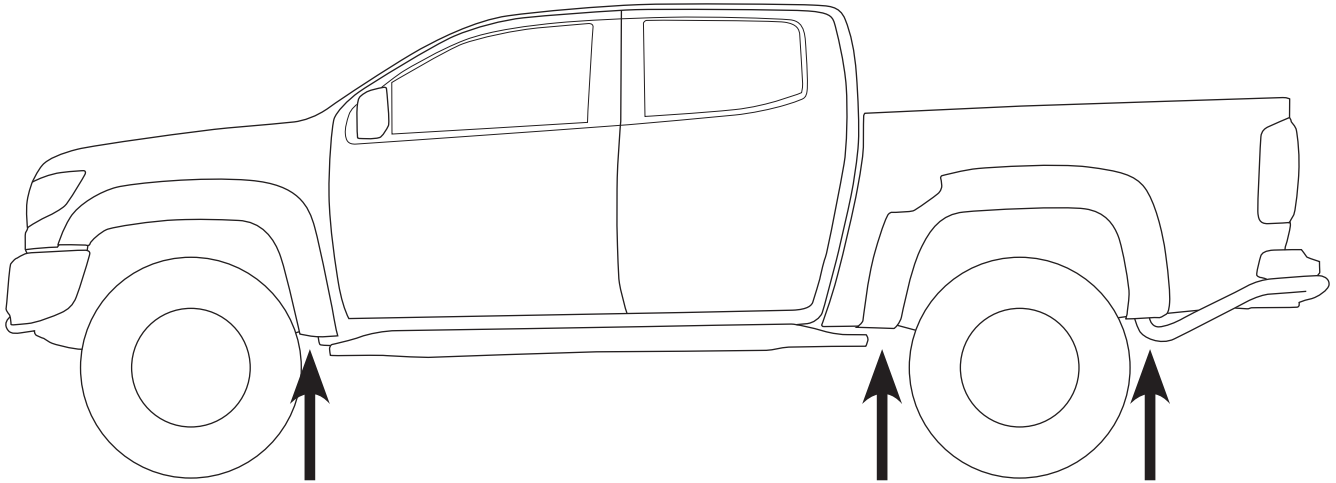


Figure 4