



**DIFFERENTIAL
SLIDER**
FOR CHEVY COLORADO



AEV30338AA
Last Updated: 04/26/19

INSTALLATION GUIDE



PLEASE READ BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

| INCLUDED PARTS | QTY | REQUIRED TOOLS |
|------------------------------|-----|-------------------|
| Rear Differential Skid Plate | 1 | Common Hand Tools |
| Top Plate Bracket | 1 | |
| Hardware Pack | 1 | |



INSTALLATION

1. Hold the Slider in place below the differential.
 - A. Install top plate.
 - B. Loosely install QTY 2 M10 hex bolts (fig. 1).

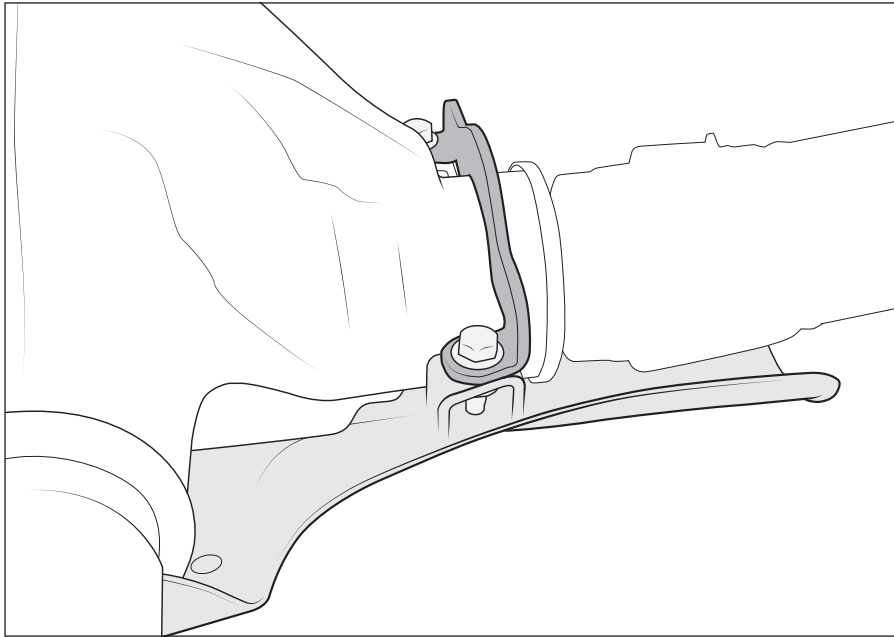


Figure 1

2. Install supplied U-Bolts over the differential through the Slider (fig. 2). Loosely install QTY 4 M10 nuts.
3. Tighten all bolts, ensuring U-bolts show at least 3 threads protruding through the nuts.

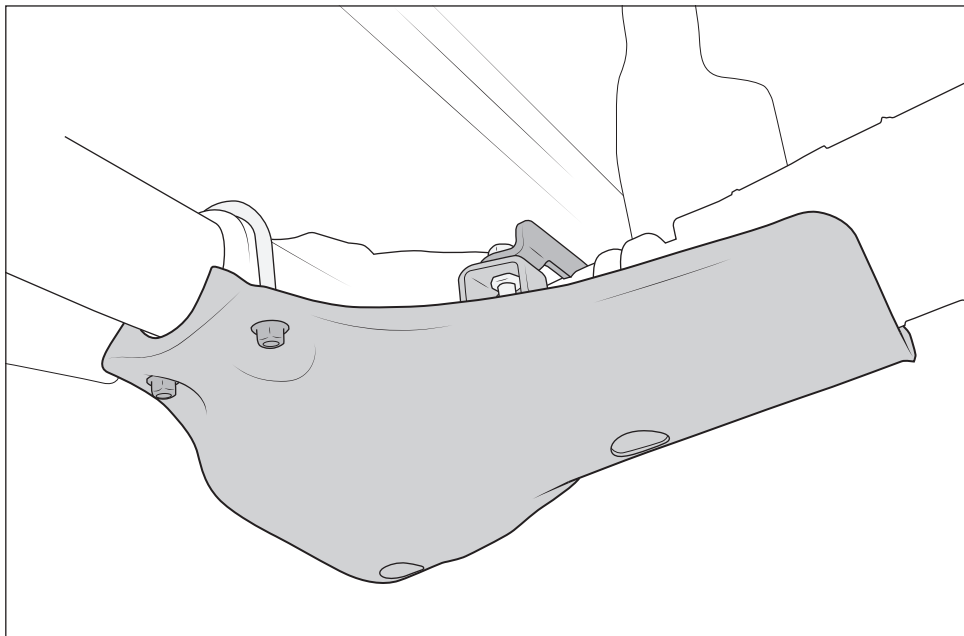


Figure 2