


To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

AEV30478AA Last Updated: 08/01/23

AMERICAN EXPEDITION VEHICLES


1. Begin feeding the wire harness through the frame of the vehicle. Following the same path as the standard vehicle harness, using the provided fasteners and clips rout the ram rear wire harness.

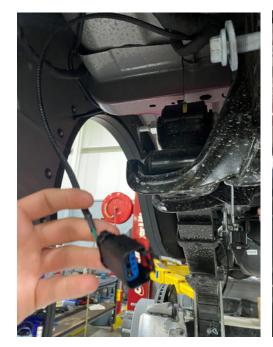






2. When reaching the front of the vehicle be sure to use the locations below and begin feeding the harness up towards the standard Ram aux adapter.

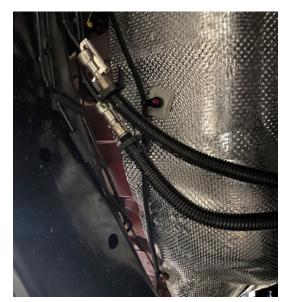



3. Install the end of the wire harness into the top right location in the ram aux adapter.

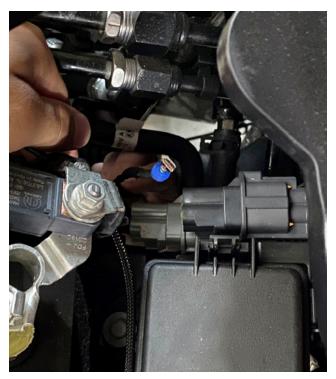

4. When attaching the rear bumper, connect the end of the harness with the harness that resides in the AEV rear bumper.