



REAR DIFF SLIDER

WRANGLER | GLADIATOR | BRONCO

PLEASE READ ENTIRELY BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

INCLUDED PARTS	QTY	REQUIRED TOOLS
Differential Slider	1	Common Hand Tools
Differential Clamp	1	
U-Bolt	2	
Hardware Pack	1	



1. Place the U-Bolts over the rear axle and through the differential slider. Loosely install the M10 nuts (fig. 1).

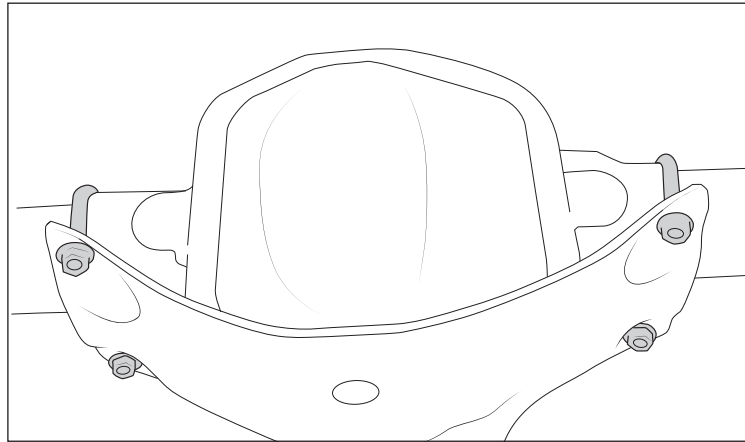


Figure 1

2. Insert the hooked end of the clamp into the slot. Pivot around the differential until aligned with the bolt hole. Install the M10 bolt and torque to 35 ft-lbs. (fig. 2).

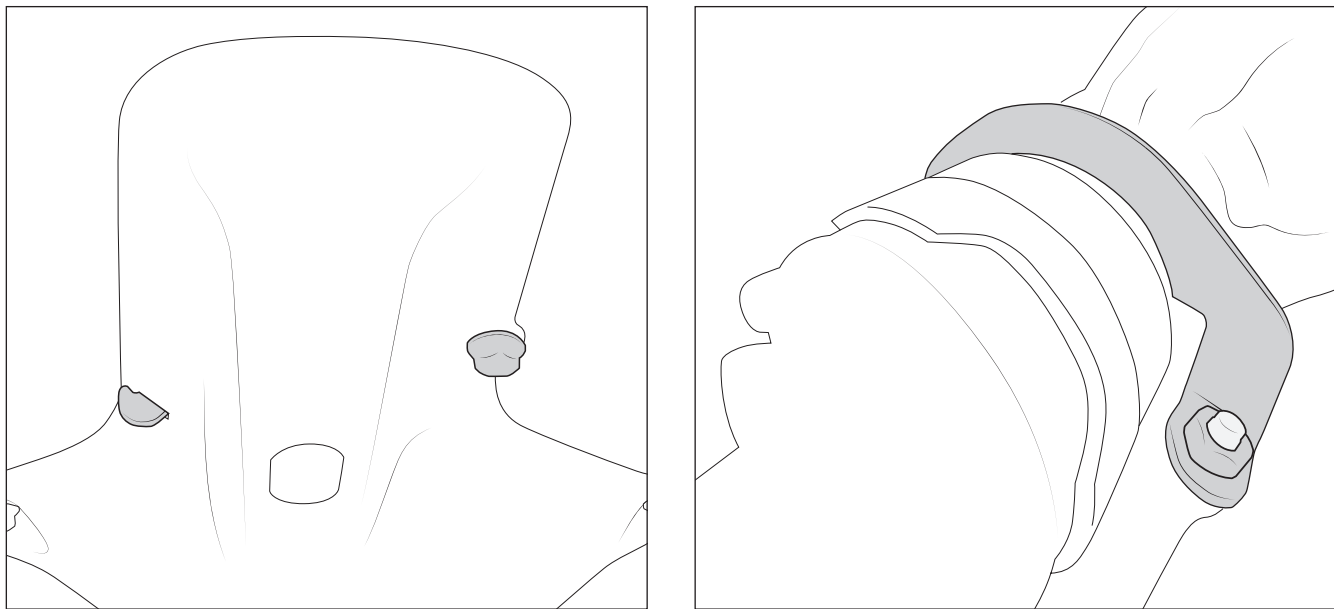


Figure 2

3. Tighten the nuts on the U-bolts to 30 ft-lbs.

NOTE: It is important that these are torqued down equally. Please make sure that the U-Bolts have close to the same amount of thread showing after being torqued down.